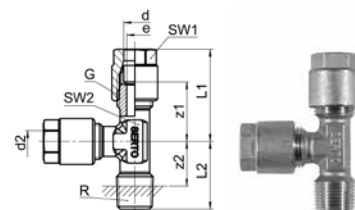


L-Einschraubverschraubung

Té mâle en bout

Male adaptor L union

SO 03721 L


Type -d -d2 -R	Mat.-Nr.	bar	G	SW1	SW2	L1	L2	z1	z2	e	kg/100
Für metrische Rohre R=Rohrgewinde (kegelig)	Pour tubes métriques R=Filetage-gaz BSP (conique)	For metric tubes R=BSP thread (tapered)									
SO 03721-4-4-1/8	248.3711.050	125	1/8	12	10	27.0	20.0	20.0	13.5	3.4	4.100
SO 03721-5-5-1/8	248.3711.070	125	1/8	12	10	27.0	20.0	20.0	13.5	4.0	4.190
SO 03721-6-6-1/8	248.3711.100	125	1/8	12	10	28.0	20.0	20.0	13.5	4.0	4.310
SO 03721-6-6-1/4	248.3711.180	125	1/8	12	11	30.0	25.0	22.0	15.0	4.0	5.390
SO 03721-8-8-1/4	248.3711.220	125	1/4	14	11	31.5	25.0	22.0	15.0	6.0	7.830
SO 03721-10-10-1/4	248.3711.260	100	3/8	17	14	35.0	25.0	23.0	15.0	8.0	11.720
SO 03721-10-10-3/8	248.3711.320	100	3/8	17	14	35.0	25.0	23.0	16.0	8.0	12.620

Für Zollrohre	Pour tubes pouces	For inch tubes									
SO 03721-6,35-6,35-1/8	248.3711.110	125	1/8	12	10	28.0	20.0	20.0	13.5	4.0	4.250
SO 03721-6,35-6,35-1/4	248.3711.190	125	1/8	12	11	30.0	25.0	22.0	15.0	4.0	7.280
SO 03721-9,52-9,52-1/4	248.3711.240	100	3/8	17	14	35.0	25.0	23.0	15.0	8.0	11.810
SO 03721-9,52-9,52-3/8	248.3711.290	100	3/8	17	14	35.0	25.0	23.0	16.0	8.0	12.710

Umrechnung für "d" bei Zollrohren:

6,35 = 1/4

9,52 = 3/8

Conversion de "d" pour tubes en pouces:

6,35 = 1/4

9,52 = 3/8

Conversion for "d" for inch tubes:

6,35 = 1/4

9,52 = 3/8